

# Individual Remote Controller

## Wired MA remote controller PAR-21MAA



**Dimensions** 130(W) x 120(H) x 19(D) mm  
5-1/8(W) x 4-3/4(H) x 3/4(D) in.

- Dot Liquid Crystal Display (LCD)
- Multi-language Display


- Set temperature in 1°C/°F increment

- Weekly timer

Up to 8 ON/OFF/temperature settings per day in one-minute increments. Setting kept in nonvolatile memory. No need to worry about resetting after a power failure.

- Self-diagnosis function immediately reports an error code in case of malfunction

### Example of system configuration

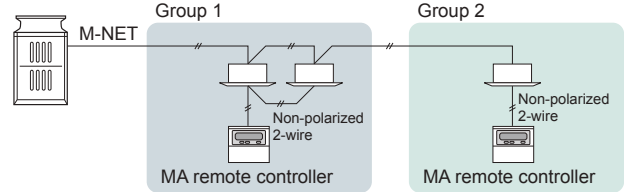

### Multi-language Display Example [Dot display table]

Language	English	German	Spanish	Russian	Italian	Chinese	French	Japanese	
Waiting for start-up	PLEASE WAIT	←	←	←	←	←	←	←	
Operation mode	Cool	COOL	Kühlen	FRÍO	Холод	COOL	FROID	冷房	
	Dry	DRY	Trocknen	DESHUMIDIFICACIÓN	Сушка	DRY	DESUHU	ドライ	
	Heat	HEAT	Heizen	CALOR	Тепло	HEAT	CHAUD	暖房	
	Auto	AUTO	AUTO	AUTO	Автомат	AUTO	AUTO	自動	
	Auto(Cool)	COOL	Kühlen	FRÍO	Холод	COOL	FROID	冷房	
	Auto(Heat)	HEAT	Heizen	CALOR	Тепло	HEAT	CHAUD	暖房	
	Fan	FAN	Lüfter	VENTILACIÓN	ВЕНТ	VENTILAZIONE	送風	VENTILATION	送風
	Ventilation	VENTILATION	Gelüftebetrieb	VENTILACIÓN	ВЕНТИЛЯЦИЯ	ARIA ESTERNA	换气	VENTILATION	換気
	Stand by (Hot adjust)	STAND BY	STAND BY	CALENTANDO	ДОГРЕВ: ПАУЗА	STAND BY	准备中	PRE CHAUFFAGE	準備中
Defrost	DEFROST	Auftauen	DESCONGELACIÓN	ОТТАВАИВАНИЕ	SPRINAMENTO	除霜中	DEGIVRAGE	霜取中	
Button not used	NOT AVAILABLE	Nicht verfügbar	NO DISPONIBLE	НЕ ДОСТУПНО	NON DISPONIBILE	无效按钮	NON DISPONIBILE	無効ボタン	
Check (Error)	CHECK	Prüfen	COMPROBAR	ПРОВЕРКА	CHECK	検査	CONTROLE	点検	
Test run	TEST RUN	Testbetrieb	TEST FUNCIONAMIENTO	ТЕСТОВЫЙ ЗАПУСК	TEST RUN	试运行	TEST	試運転	
Self check	SELF CHECK	Selbst-diagnose	AUTO REVISIÓN	САМОДИАГНОСТИКА	SELF CHECK	自我诊断	AUTO CONTROLE	自己診断	
Unit function selection	FUNCTION SELECTION	Funktion auswählen	SELECCIÓN DE FUNCIÓN	ВЫБОР ФУНКЦИИ	SELEZIONE FUNZIONI	功能选择	SELECTION FUNCTIONS	メニュー選択	
Setting of ventilation	SETTING OF VENTILATION	Lüfterstufen wählen	CONFIG. VENTILACIÓN	НАСТРОЙКА ВЕНТИЛЯЦИИ	IMPOSTAZIONE ARIA ESTERNA	换气设定	SELECTION VENTILATION	換気設定	

### Functions

□: Each unit ○: Each group ◎: Group or collective ✕: Not available

Item	Description	Operations	Display
ON/OFF	ON and OFF operation for a single group	○	○
Operation mode switching	Switches between Cool / Dry / Auto* / Fan / Heat. Operation modes vary depending on the air conditioner unit. * Auto only supported for the CITY MULTI R2 and WR2 Series.	○	○
Temperature setting	Sets the temperature for a single group Range of temperature setting: Cool/Dry: 19-30°C [67-87°F] (14-30°C [57-87°F]) Heat : 17-28°C [63-83°F] (17-28°C [63-83°F]) Auto : 19-28°C [67-83°F] (17-28°C [63-83°F]) Values in parentheses "( )" are for PEFY/PFFY by setting DipSW 7-1 to ON and limits to N16H fan speed only.	○	○
Fan speed setting	Models with 4 air flow speed settings: High/Mid-1/Mid-2/Low Models with 3 air flow speed settings: High/Mid/Low Models with 2 air flow speed settings: High/Low Fan speed setting (including Auto) varies depending on the model.	○	○
Air flow direction setting	Air flow direction angles (4-angle, or 5-angle Swing) Auto Louver ON/OFF Air flow direction settings vary depending on the model.	○	○
Permit / Prohibit local operation	Individually prohibit operation of each local remote control function (ON/OFF, Change operation mode, Set temperature, Reset filter). *1: When the local remote controller inactivation command is received from the main system controller, " " is displayed.	✕	○ <sup>*1</sup>
Prohibition/permission of specified mode (Cooling prohibited/heating prohibited/cooling-heating prohibited)	Operation for the following modes is prohibited through System Controller settings: At cooling prohibited: Cool, Dry, Auto, At heating prohibited: Heat, Auto, At cooling-heating prohibited: Cool, Heat, Dry, Auto	✕	○
Error	When an error is occurring on an air conditioner unit, the affected unit and the error code are displayed.	✕	□
Ventilation equipment	Up to 16 indoor units can be connected to an interlocked system that has one LOSSNAY. LOSSNAY items that can be set are "Hi" "Low" "Stop". Ventilation mode switching is not available.	○	○
Set temperature range limit	Set temperature range limit to cooling, heating, or auto mode.	○	○
Auto lock function	Setting/releasing of simplified locking for remote control switch can be performed. · Locking of all switches · Locking of all switches except ON/OFF switch	○	○